

TITAN[®] DISPOSABLE COVERALLS 460

DRESS INSTRUCTION

CE EN14126 - TYPE 3-B, 4-B




ESKOSAFETY.COM



1 Select appropriate type and size.





2 Sit and step into legs of coverall.
(Place coverall legs over working boots).

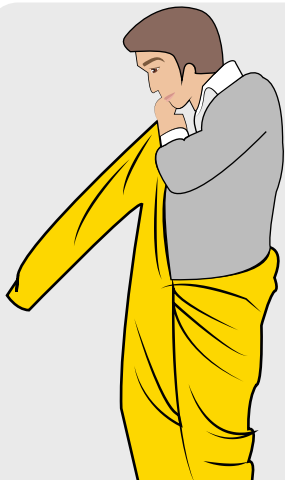

3 Pull coverall over arms and shoulders.



4 Pull the zip half way up.

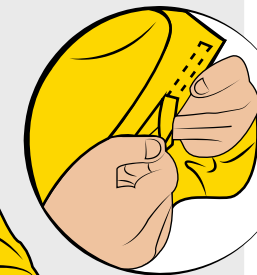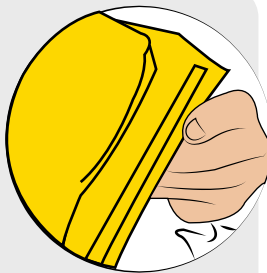

5 Ensure hood fits close to the face protection and zip up the coverall. Adhere the flap.



6 Stretch yourself easily to confirm suitability before you enter the workplace.

ATTENTION

1. Do not reuse.
2. To comply with Type 4/5/6 and EN1073-2, all openings such as wrists, ankles, neck etc. should be securely taped.

TITAN[®]

DISPOSABLE COVERALLS


460

UNDRESS INSTRUCTION

CE EN14126 - TYPE 3-B, 4-B



ESKOSAFETY.COM

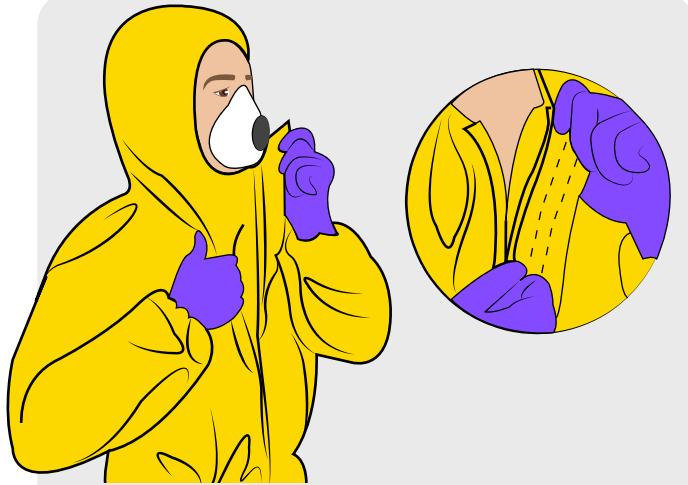

1 Start by tearing off the flap.



2 Unzip to the waist.




3 Grab the outside edge of the hood by your thumb and peel off from your head.



4 Release first arm from behind back.



5 Extract second arm from within garment. Sit and roll garment down body.

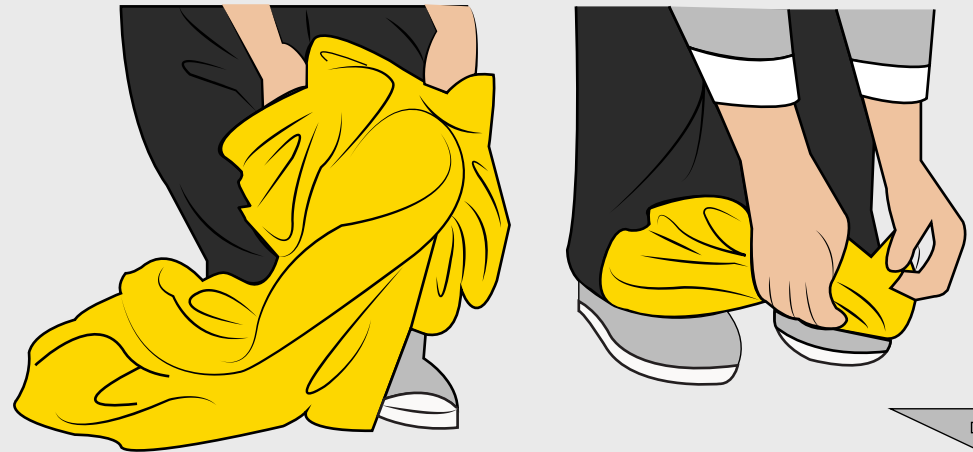

6 Turn the outside of contaminated coverall towards the inside. Fold or roll into a bundle, and dispose.

ATTENTION

1. Be careful that no contaminant comes into contact with wearer
2. Contaminated garment should be disposed in accordance with local regulations.

